


# How to use smartLink HW-DP with PDM

1. Configuration of smartLink HW-DP
2. Installation of PROFIBUS-Driver
3. Configuration in the Siemens Software (e.g. SIMATIC PDM stand alone)

## 1) Configuration of smartLink HW-DP

1. Log on to the web server of smartLink HW-DP
2. Navigate to PROFIBUS and open "Segment DP1"

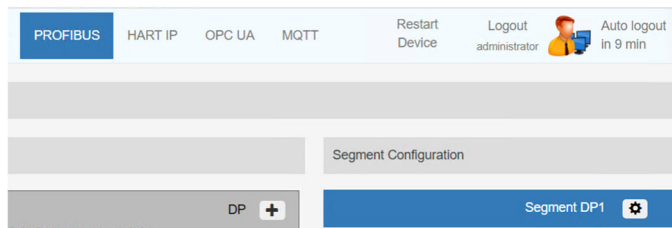

3. Adjust the PROFIBUS-Parameters as needed, click "OK" and click "Apply Configuration".

### Bus parameter

	Project Settings		Effective Settings
Baudrate	1.5 MBaud		1.5 MBaud
Tsl [t/bit]	300	✓	300
Min Tsdrr [t/bit]	11	✓	11
Max Tsdrr [t/bit]	150	✓	150
Ttr [t/bit]	20000	✓	20000
Highest Station Address	126	✓	126
Tset [t/bit]	1	✓	1
Max Retry Limit	3	✓	3
Station Address	0	✓	0

Please note: The busparameters only get effective with the action "Apply Configuration".


OK Cancel

## 2) Installation of PROFIBUS-Driver


1. Download and install the latest PROFIBUS-Driver “Universal PROFIBUS Driver V5.47.4” (or higher version) from the Softing web site.
2. Start the Driver Configurator from the start menu



3. Add a new Node under “smartLink HW-DP”

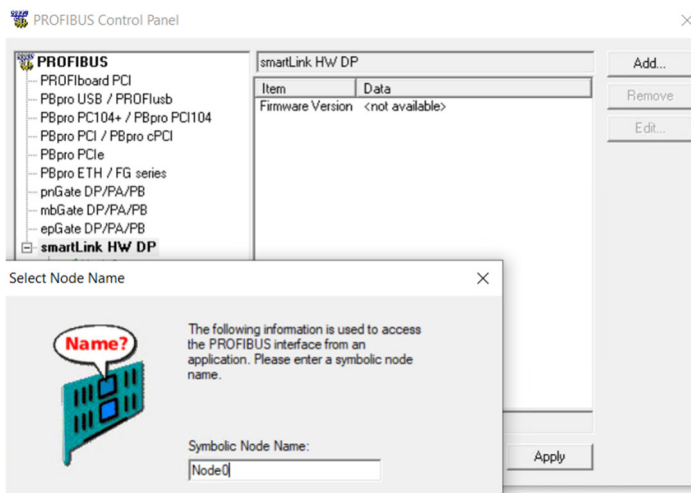


4. Follow the instructions on the screen and finally press “Apply”.  
A green check mark will show up beside the new Node.  
The Interface Number will later show up in the Siemens Software.

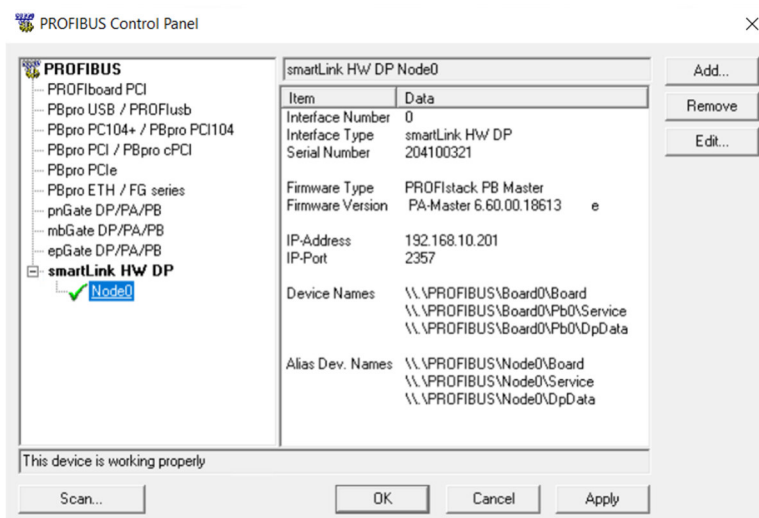

### 3) Configuration in the Siemens Software (e.g. SIMATIC PDM stand alone)

1. Download and install the PDM libraries from softing web site:
  - [PDM libraries - for integration into Siemens PDM](#)
2. In the interface dialog of PDM you must choose “Softing PROFIBUS Interface.PROFIBUS.1”
3. In the Properties you can choose the Board number (Refer to Interface number in the ROFIBUS Control Panel here “0”)
4. Do not try to adjust the Bus parameter in this dialog, as the Bus parameters from the smartLink HW-DP web interface will apply.

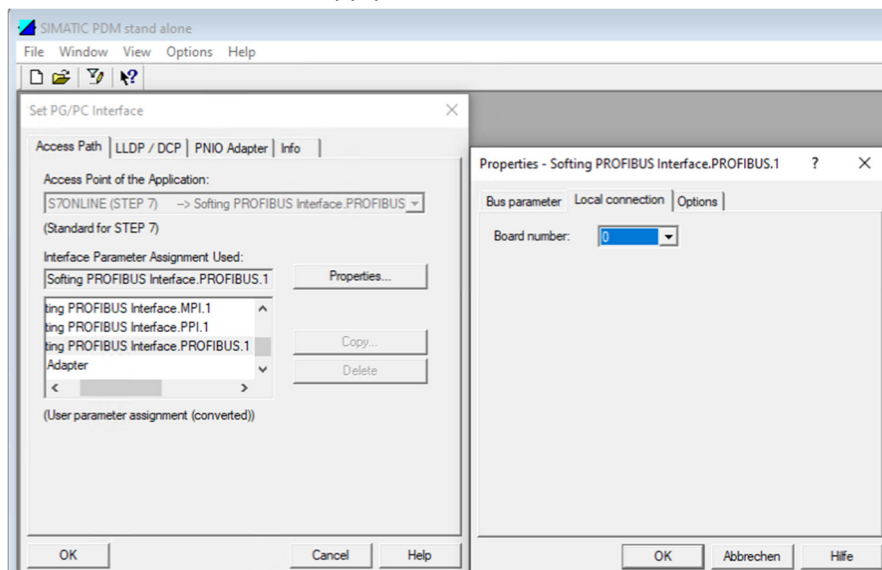

**Note:**

Within PDM you must use a PROFIBUS-Network even though smartLink HW-DP is connected via Ethernet