

用户指南

mobiLink DBA-KM-020411





版本: ZH-122020-1.33-1 © Softing Industrial Automation GmbH

免责声明

这些说明中包含的信息符合其印刷时的技术水平以及我们的最高知识水平。Softing 不保证本文档中完全没有错误。 在任何情况下,这些说明中的信息都不构成对所描述产品的保修索赔或合同协议的基础,并且,根据《德国民法典》第 443 条的规。尤其不能将其视作与质量和耐用性相关的保证。我们保留对这些说明进行任何更改或改进的权利, 恕不另行通知。如果需要技术更改和产品改进,则产品的实际设计可能会与这些说明中包含的信息有所不同。

商标

FOUNDATION™和 HART® 是位于美国德克萨斯州奥斯汀的 FieldComm Group 集团的商标。

开源

为**了符合国**际软件许**可条款**,我们提供了我们的产品中使用的开源软件的源文件。有关详细信息,请访问: https://opensource.softing.com/

如果您对我们的源代码修改和使用的源代码感兴趣,请联系:info@softing.com

Softing Industrial Automation GmbH

Richard-Reitzner-Allee 6 85540 Haar / Germany https://industrial.softing.com

+ 49 89 4 56 56-340
 + 49 89 4 56 56-488
 info.idn@softing.com
 support.automation@softing.com



扫描二维码以获得更多产品信息。

目录

1.1 请先阅读 1.2 目的 1.3 目标群体 1.4 印刷规范 1.5 文件历史记录 1.6 相关文档 1.7 文档反馈 第 章 2 关于 mobiLink 2.2 交付和下载 2.2 2.3 功能描述 2.3 功能描述 2.4 供电 2.4.2 电池寿命 2.4.3 更换电池 第 章 3 安全 3.1 訪爆 3.2 使用警告 3.3 运输、清洁和维护 4 年格名局动 4.3 4.3 准备局动 4.3 准备局动 4.3 准备局动 4.3 在名局动 4.3 在名局动 4.3 在名局动 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink	. 5
1.2 目的 1.3 目标群体 1.4 印刷规范 1.5 文件历史记录 1.6 相关文档 1.7 文档反锁 第章 2 关于 mobiLink 2.1 預期用途 2.2 交付和下载 2.3 2.3 功能描述 2.4 供电 2.4.2 电池寿命 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 4 年 安装和使用 mobiLink 4.1 取出并检查 mobiLink 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	5
1.3 目标群体 1.4 印刷规范 1.5 文件历史记录 1.6 相关文档 1.7 文档反馈 第章 2 关于 mobiLink 2.1 预期用途 2.2 交付和下载 2.3 功能描述 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.2 连接类型 4.3 波备启动 4.3.1 USB 连接 4.3.2 监牙配对 4.3 准备启动 4.3.1 USB 连接 4.3.2 监牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	5
1.4 印刷规范 1.5 文件历史记录 1.6 相关文档 1.7 文档反馈 第章 2 关于 mobiLink 2.1 顶期用途 2.2 2.1 顶期用途 2.2 交付和下载 2.3 功能描述 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 篮牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	5
1.5 文件历史记录 1.6 相关文档 1.7 文档反馈 第章 2 关于 mobiLink 2.1 预期用途 2.2 交付和下载 2.3 功能描述 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 復用警告 3.3 运输、清洁和维护	5
1.6 相关文档 1.7 文档反馈 第章 2 关于 mobiLink 2.1 预期用途 2.2 交付和下载 2.3 功能描述 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 第章 3 方路電 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	6
1.7 文档反馈 第章 2 关于 mobiLink 2.1 预期用途 2.2 交付和下载 2.3 功能描述 2.4 供电 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 疫用警告 3.3 运输、清洁和维护 3.3 第章 4 安装和使用 mobiLink 4.1 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	6
第章 2 关于 mobiLink	6
2.1 预期用途 2.2 交付和下载 2.3 功能描述 2.4 供电 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 2.4.3 更换电池 第 章 3 方案全 3 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第 章 4 安装和使用 mobiLink 4.2 连接类型 4.3 准备启动 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink	. 7
2.2 交付和下载 2.3 功能描述 2.4 供电 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 2.4.3 更换电池 第 章 3 分全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 4 安装和使用 mobiLink 4.2 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	7
2.3 功能描述 2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink	7
2.4 供电 2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 2.4.3 更换电池 第 章 3 分全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 3.3 第 章 4 安装和使用 mobiLink 4.1 和出并检查 mobiLink 4.2 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	8
2.4.1 电池安全与处置说明 2.4.2 电池寿命 2.4.3 更换电池 2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	9
2.4.2 电池寿命 2.4.3 更换电池 第章 3 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 4.3 准备启动 4.3 准备启动 4.3.1 USB 连接 4.3 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	9
2.4.3 更换电池 第章 3 安全 3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	10
第章 3 安全 3.1 防爆	10
3.1 防爆 3.2 使用警告 3.3 运输、清洁和维护 3.3 运输、清洁和维护 第 章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.3.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	11
3.2 使用警告 3.3 运输、清洁和维护 3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	11
3.3 运输、清洁和维护 第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.3 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	12
第章 4 安装和使用 mobiLink 4.1 取出并检查 mobiLink 4.2 连接类型 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.3.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	12
 4.1 取出并检查 mobiLink	13
 4.2 连接类型	13
 4.3 准备启动 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink	13
 4.3.1 USB 连接 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项 	13
 4.3.2 蓝牙配对 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项 	14
 4.4 在 HART 环境下使用 mobiLink 4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项 	14
4.5 在现场总线环境下使用 mobiLink 4.5.1 有关 PROFIBUS PA 的特殊注意事项	15
4.5.1 有关 PROFIBUS PA 的特殊注意事项	16
	17
4.5.2 FF 和 PA 的 mobiLink 许可	18
4.6 在爆炸性环境下使用 mobiLink	19
4.7 延 长电 池寿命	19
4.8 更新固件	20
第 章 5 安装 mobiLink	20

第 章	6	技术数据	22
	6.1	控制图	. 24
第 章	7	符合性声明	25
	7.1	认证标 志	. 28
	7.2	蓝 牙 认证	. 29
	7.2.1	在美国使用	. 29
	7.2.2	在加拿大使用	. 29
	7.2.3	在日本使用	. 29
	7.3	ATEX EC 证书	. 30
	7.4	IECEx 证书	. 31

1 关于本指南

1.1 请先阅读

任何使用 mobiLink 的人员都必须仔细阅读和完全理解本指南,以确保安全正确地使用本设备。 因本产品安装或操作不当而造成的损失, Softing 不承担任何责任。本文档不保证没有任何错误。 本文档中包含的信息如有更改, 恕不另行通知。如果您在理解本指南中的信息和说明时遇到任何 问题,请以书面形式报告给我们。要获取最新版本的硬件指南,请访问我们网站上的下载中心。

1.2 目的

本指南介绍如何通过 PC、平板电脑或智能手机上支持的软件应用程序并通过 USB 或蓝牙来连接和启动 mobiLink, 以及如何使用本设备配置和维护现场设备。

1.3 目标群体

本用户指南是为负责配置和维护现场设备(包括 HART、FOUNDATION 现场总线和 Profibus PA 设备)的经验丰富的操作人员和网络专业人员编写的。使用 mobiLink 的任何人员都必须阅读并完全 理解本指南中的安全要求和操作说明。

1.4 印刷规范

在我们的产品文档中适用以下印刷规范:

涉及用户交互的按键、按钮、菜单项、命令等 元素以粗体设置,菜单序列用箭头分隔	打开开始 控制面板 程序
用户界面中的按钮被放在方括号中,并设置为 粗体。	按下[开始]启 动应用程序
编码样 本、文件提取和屏幕输出被设置 为 Courier 字体	MaxDlsapAddressSupported=23
文件名和目录用斜体表示	设备描述文件位于: C:\ <application name>\delivery\software\Device Description files</application



警告

该符号用于表示潜在的危险情况,如不避免,可能会导致轻度到中度损坏或伤害。

注意

该符号用于提示在设备安装、使用或维修期间应注意的重要信息。



提示

该符号用于提供有用的用户提示。

1.5 文件历史记录

文件版本	相对于先前版本的修改。————————————————————————————————————
1.00	初始版本
1.01	对硬件版本 1.00 未做变更。日本版本增加了蓝牙认证。
1.02	对硬件版本 1.00 未做变更。增加了基于软件的 PROFIBUS PA 功能的说明。
1.30	提供了新的许可,延长了电池使用寿命并新增了蓝牙低功耗功能。
1.31	硬件版本从 1.00 更改为 1.10,以批准用于爆炸组 IIC。参见技术数据 <u>见技术</u> <u>数据^{□22}一节。</u>
1.40	
1.32	文档版本更正。回滚到版本号 1.3x, 并且出于编辑原因将其发布为 V1.32。增加了 <u>FM 批^{℃28}</u> 准和证书。
1.33	警告"注意事项已加入 3.1 <u>防爆⁰¹¹章节。</u>
1.33-1	证书 章节移除。6.1 章节中 <u>FM 控制图^{凸24} 和7符合性声明^{凸25} 已更新.</u>

1.6 相关文档

以下文档介绍 mobiLink 的初始启动以及如何使用支持的应用程序软件操作设备。有关更多信息和 下载,请参 <u>阅产品网站</u>:

- 入门 快速指南 V1.30(随盒装产品提供)
- 通信配置工具 用户指南 V2.23
- MOBILINKdtm 用户指南 V1.30

1.7 文档反馈

我们欢迎您提供反馈意见,以帮助我们改进文档。您可以使用 Adobe Reader 中的编辑工具将意见 添加到 PDF 文件中,并将您的反馈通过邮件发送至 <u>support.automation@softing.com。</u>

如果您只想通过电子邮件发送反馈,请提供以下信息:

- 文档名称
- **文档版本(如封面页所示**)
- 页码

2 关于 mobiLink

mobiLink 是一款移动式现场通信设备, 旨在对外部供电的 HART 回路或现场总线区段上的 HART、FOUNDATION 现场总线或 PROFIBUS PA 现场设备进行配置、管理和排障。它适用于危险 区域(爆炸性环境),可以通过有线或无线连接到 PC、平板电脑或智能手机。它可以使用任何常见 的 FDT 框架应用程序和配置工具(例如通信配置工具)进行操作。除了使用 FDT 框架应用程序之 外, mobiLink 还可与特定的驱动器一起使用, 以连接到 Yokogawa 现场设备管理工具 FieldMate。 此外, mobiLink 还支持使用 ProComSol 的 Smart Communicator 针对 Android 和 iOS 设备进行 HART 配置和通信。

2.1 预期用途

mobiLink 用于网段接口,以配置、调试和维护连接的现场设备(HART、FOUNDATION 现场总线或 PROFIBUS PA)。mobiLink 既可以在大规模现场设备中使用,也可以在场外的工作台上使用。由于 mobiLink 不会为连接的设备供电,因此需要带电的 HART 回路或带电的现场总线区段。本设备已 经通过了爆炸性环境认证(请参阅 <u>符合性声明</u>²⁵),并且可以连接到本安型现场设备。



警告

请勿将 mobiLink 直接连接到主电源。



注意

避免干扰正在运行的系统。在运行中的设备中使用 mobiLink 时,请格外小心。确保使用 mobiLink 不会导致流程中断,从而导致损坏、损害或死亡。请遵守本文档中的所有 安全预防措施和工作程序!

2.2 交付和下载

产品包装盒中随附以下组件:

- mobiLink 单元
- USB 数据线(2 米)
- 带夹钳的红色和黑色测试电缆(1 米)套装
- 3 节 AA 电池
- 入门指南印刷手册

以下组件可从产品页面上下载:

- mobiLink Manager
- 通信配置工具
- MOBILINKdtm
- PACTware

2.3 功能描述



连 接器		Foundation 现场总线	PROFIBUS PA	HART	
(1)	红 色 现场总线	DATA +	PA +		
(2)	普通黑色	DATA -	PA -	HART N	
(3)	HART 红色			HART P	

连 接器 / 按 钮	功能
(4) USB	USB-C 型连接器
(5) 蓝牙按钮	激活以 进行配对
(6) 电源开/关按钮	开/关

LED	功能
(7) 现场总线	表示 设备正在进行现场总线通信。
(8) HART	表示设备正在进行 HART 通信。
(9) 蓝牙	打开 2 分钟 = 配对模式;每 2 秒闪烁一次 = 已与设备配对; 每秒闪烁一次 = 正与设备通信。
(10) 低电量	每 2秒闪烁一次 = 电池电量低;每 10 秒闪烁一次 = mobiLink 正在以省电模式运行。
(11) 电源	常亮 = 设备已打开。

2.4 供电

设备需要电池才能运行。在首次使用 mobiLink 之前,请打开设备背面的电池盒,然后插入我们提供的 AA 不可充电电池。另请参阅 更换电池^{险10}一节。

电池电量由设备监控。当电池电量低时, 黄色的电池 LED 灯会亮起。使用设备之前, 请检查电池。 有关详细信息, 请参阅 <u>准备启动^{D13}一</u>节。



电池寿命取决于操作模式(USB 或蓝牙)和环境温度(请参阅 <u>技术数据^{D22})。</u>

2.4.1 电池安全与处置说明

注意

请阅读**以下说明,以避免在危险区域内损坏您的**设备,包括由于泄漏、过热、爆炸或腐蚀等引起的伤害或火灾。

- 只能使用<u>技术数据^{D22}</u>一章中指定的电池类型操作 mobiLink。如果使用非指定类型的电池操作 mobiLink,则防爆证书将会失效。
- 一旦电池 LED 灯开始闪烁(每2秒一次),请立即更换电池。必须立即从设备中取出已放电的电池,以防止潜在的损坏。
- 请勿在危险区域内拆卸或安装电池,以及打开电池盒。
- 始终使用相同类型的新电池并同时更换所有电池。在不同的放电状态下,存在电压反转并逐 渐发生泄漏或破裂的危险。
- 请将电池存放在室温干燥的地方。请勿将电池存放在火炉或烤箱等热源的附近或上方。
- 如需长期存放,建议从设备中取出电池,以防止由于电池泄漏而造成的损坏。
- 避免机械或电气误操作。请勿短路或不当安装。如果拆解、挤压、再充电或暴露在高温下,电 池可能会爆炸、热解或漏气。
- 请**勿撕下**电池标签。
- 请勿**混用不同制造商的**电池。
- 请勿将新电池与旧电池混用。
- 必须立即从 mobiLink 中取出已放电的电池, 以免造成损坏。

2.4.2 电池寿命

电池寿命取决于操作模式,其估算如下:

操作	预 期的 电 池寿命
HART 蓝牙模式	> 45 小 时
现场总线蓝 牙模式	> 45 小 时
HART USB 模式	>6年
现场总线 USB 模式	>1年

如果未连接, mobiLink 将在 5 分钟后切换到节能模式(电源 LED 灯每 2 秒钟闪烁一次)。它将保持节能模式 25 分钟, 如果未连接, 则将自动关闭。

2.4.3 更换电池

请按照以下步骤更换 mobiLink 电池:

- 1. 关闭 mobiLink。
- 2. 断开设备与 FOUNDATION FIELDBUS 或 HART 的连接。
- 3. 松开背面的电池盖。
- 4. 揭开盖子。
- 5. 取出电池。
- 6. 按照电池盒底部所示,插入备用电池。



警告

只能使用 <u>技术数据^{D2}</u>一章中指定的电池类型。如果使用非指定类型的电池操作 mobiLink, 则防爆证书将会失效。

- 7. 确保电池正确就位。
- 8. 装回电池盖,并确保其牢固就位
- 9. 用手拧紧电池盖。不要拧得太紧!

Ex the D (a D 20) 21 THOO'C 2020X00X00X00X 響任: 通知在危险场所使用 USB 彼日。 请知在危险场所使用 USB 彼日。 请知在危险场所使用 USB 彼日。 何如使用书画作着起的电池。 仅可使用书画作着起的电池。 风可使用书画作着起的电池。 不差详细信息、请参见说明	mobilink VI.15 Provide Automatic Aut	HE EN LIGHT TO CO
Contraction of the second		and the second s

3 安全

mobiLink 只能由合格的人员操作。操作人员负责产品的运输、操作和维护。只有按规定使用 mobiLink, 才能确保人身安全和保护设备。

为了确保人员和设备的安全,必须按照制造商的指引以及本手册的规定使用 mobiLink。必须遵守 适用于本设备的当地法律法规。

3.1 防爆

使用 mobiLink, 您可以建立与 HART、FOUNDATION 现场总线或 PROFIBUS PA 设备的本安连接。 本设备被设计用于危险区域, 对应的分类为 1 区/2 区(Gas-Ex 类别 2G)。它被批准用于 IIC 爆炸 组, 温度等级为 T4 或以上。mobiLink 可以连接到 0 区爆炸性环境中经防爆认证的本安电路。

确保只在符合当地有关在有爆炸性气体的危险区域安装电气设备的安全要求的情况下使用本设备。此外,请注意以下几点:

- 除电池盒之外,请勿打开 mobiLink。
- 请勿在爆炸性环境中打开电池盒。
- 使用产品之前,必须充分理解本文档中的所有信息和注意事项。
- 用户必须确保 mobiLink 的电气参数与现场总线设备相匹配。
- 确保 mobiLink 的电气参数与现场总线设备相匹配。
- 请勿在危险区域内使用 USB 连接到主机设备。
- 如果 mobiLink 已经或正在连接到非本安电路或超出指定的电气参数,则 mobiLink 的防爆认证会失效。不得继续在本安电路上使用 mobiLink。已经或正在连接到非本安电路上的任何 mobiLink 必须用清晰的方式永久性标记,以防止将来误用。
- 切勿在开放式外壳上使用 mobiLink。打开外壳会导致防爆认证失效。
- 使用 mobiLink 之前, 请确保已关闭电池盒。
- 请勿在爆炸危险区域中取出或插入电池。
- 只能使用认可的电池。使用任何其他电池类型都会导致防爆认证失效,并构成安全隐患。
- 如果未遵守本摘录文件中所述的注意事项,或者不当操作本设备,Softing 保留免除任何责任的权利。此外,设备和备件的保修将不再适用。
- 必须遵守本硬件指南的详细信息,并且必须遵守使用条件以及产品标识和标签上所示的适用 详细信息。
- 设备的任何选择和操作都必须考虑针对危险区域/场所使用的电气设备的当地要求。在欧盟境内,必须严格遵守 EN 60079-14 的要求。
- 必须采取适当的预防措施以防止意外启动或损坏设备。
- 设备仅允许用于预期用途。如果不遵守规定,则 Softing 的保修条款和责任将不再适用!
- 所有连接的电气组件都必须适合各自的预期用途。

操作人员必须确保遵守当地的法规雷击。以防止。



注意

如果将 mobiLink 连接到非本安电路,或者设备在指定的电气参数范围之外操作,则防爆认证不再有效。在这种情况下,设备可能无法再用于本安电路,并且必须对用户进行相应的清晰标记,以防止误用。



警告

如果在危险(爆炸)区域内使用 mobiLink,则只能将设备连接到经过认证的电路。在危险区域之外, mobiLink 也可能连接到非本安的 HART 和现场总线系统。用户应自行负责确保绝不超过最大允许电压 Um = 30V。

3.2 使用警告

在启动过程中, mobiLink 将会尝试根据连接的现场总线来验证操作模式。如果现场总线端子被连接到运行中的 4-20 mA 链路, 则会损害模拟过程值。确保使用正确的连接和模式。

3.3 运输、清洁和维护

运输:

在运输时,请确保对 mobiLink 进行机械保护,以防意外打开。否则,请在运输过程中取出电池。

清洁:

定期用湿布擦拭外壳。请勿使用研磨剂或溶剂。请勿在危险区域内清洁 mobiLink !

维护:

mobiLink 不包含任何可维修的部件。本设备只能由 Softing 改装和维修。打开外壳会使防爆认证 失效,并使保修无效。

4 安装和使用 mobiLink

4.1 取出并检查 mobiLink

mobiLink 随附 <u>交付和下载</u>^{□7} 一章中所列的组件提供。

使用之前:

在安装 mobiLink 之前,请检查设备的完整性,因为以下任何一种情况都会带来安全风险:

- 外壳的外部损坏
- 测试线的绝缘损坏
- **暴露于超**过规定参数的电压下
- 设备存放不当
- 运输过程中遭受的损坏
- 证书**或**标签**不完整或**难以辨认



注意

如果设备损坏,请立即联系 Softing 技术支持部门。

4.2 连接类型

mobiLink 可以通过 USB 接口或蓝牙进行连接。连接的选择取决于设备是在危险区域内还是在危险区域外使用。

如果在危险区域内使用,必须使用蓝牙连接。严禁在危险区域内使用 USB 接口。始终通过 USB 插入塑料盖中以进行保护。

如果在危险区域外使用,可以使用 USB 接口。只要遵守本安参数,就可以将本安电路连接到现场 总线和 HART 接口,请参阅 <u>技术数据</u>^{D22}一章。

4.3 准备启动

在首次将 mobiLink 与 FOUNDATION 现场总线或 PROFIBUS PA 协议结合使用之前,请确保 mobiLink 运行的是支持协议的最新固件版本。有关最新固件版本,请参阅 mobiLink 产品页面,以 及 <u>固件更新^{D20}一章,以了解如何安装固件。</u>

- 1. 在启动 mobiLink 之前, 请先建立 USB 或蓝牙连接。
- 2. 确保 mobiLink 设备已经插入电池。如果还没有, 请按照 <u>更换电池^{□10}</u> 一章中的说明插入电池。
- 3. 按下电源按钮约 2 秒钟以打开 mobiLink, 然后等待 5 秒钟, 直至电源检查完成。检查电池电量是否充足。低电池电量将通过黄色 LED 灯闪烁指示。

4.3.1 USB 连接

如果通过 USB 端口将 mobiLink 连接到主机设备, mobiLink 将自动启动 USB 通信。相反地, 如果 在没有有线 USB 连接的情况下打开 mobiLink, 则设备会自动激活无线蓝牙通信。连接 USB 数据 线时无法使用蓝牙。如果在操作过程中断开 USB 数据线连接, 则 mobiLink 将关闭电源。在蓝牙操 作期间连接 USB 线将导致 mobiLink 重新启动。



警告

USB 连接未被批准用于爆炸性环境中.

4.3.2 蓝牙配对

mobiLink 支持 Bluetooth Smart 的 Bluetooth Low Energy(BLE)协议。在蓝牙通信中, mobiLink 充 当 PC、智能手机或平板电脑的外围设备, 并且始终以 mL <SerialNumber> _BLE 的形式显示, 而 无需按下蓝牙按钮。当前, 仅在 iOS (Apple) 上运行的蓝牙设备支持 BLE。大多数 Android 设备通 常仍只能与 Bluetooth Classic 一起使用。仅在首次连接到 PC、智能手机或平板电脑时才需要与 Bluetooth classic 配对。

- 1. 按住电源按钮 2 秒钟以打开 mobiLink。mobiLink 将自动识别、配对并与 BLE 外围设备通 信。
- 2. 按下蓝牙按钮两秒钟以上,即可与 Bluetooth classic 外围设备配对。蓝色的蓝牙 LED 灯亮起。现在,mobiLink 对 Bluetooth classic 可见 2 分钟,并且可以进行配对。
- 3. 在您的蓝牙设备上启动蓝牙扫描功能。当出现名称为 mobiLink 的新设备时, 后跟序列号, 请选择 mobiLink 以进行配对。无需输入 PIN 或密码。
- 4. 按住电源按钮约 2 秒钟以关闭 mobiLink。



打开 mobiLink 且设备未连接 USB 数据线时,默认情况下会激活蓝牙通信模式。 您无需按下蓝牙按钮即可与配对的主机设备建立通信。

4.4 在 HART 环境下使用 mobiLink

HART 在 4-20 mA 电流回路上通信, 以便为连接的 HART 设备供电并指示主要过程值。确保您已 连接到有源 HART 回路, 因为 mobiLink 不会为 HART 回路上的设备供电。

在将 mobiLink 连接到本安电路之前, 请确保遵守电气本安参数(有关详细信息, 请参阅<u>技术数</u> 据^{凸22}一节)。



建立 HART 连接

- 1. 如上所述,将 mobiLink 连接到HART 环境。
- 2. 使用蓝牙或 USB 将 mobiLink 连接到 PC(或智能手机或平板电脑)。
- 3. 按住电源按钮约 2 秒钟以打开 mobiLink。
- 4. 在 PC(或智能手机或平板电脑)上启动您选择的应用程序。
- 5. 选择 mobiLink 作为 HART 接口。



操作模式通过使用的应用程序选择(MOBILINKdtm 或 ComConf。mobiLink 检查 接口上的电气情况是否与所选模式匹配。因此, 在启动应用程序之前, 必须将 mobiLink 连接到 HART 设备或现场总线区段。

确认 HART LED 指示 HART 模式。
 LED 每 2 秒钟闪烁一次。

4.5 在现场总线环境下使用 mobiLink

FOUNDATION 现场总线和 PROFIBUS PA 在 mobiLink 上使用相同的物理层。设备将在启动过程 中检查现场总线的电压和极性。如果检测到问题, mobiLink 将不会建立连接。在将 mobiLink 连接 到本安电路之前,请确保遵守电气本安参数(有关详细信息,请参阅<u>技术数据</u>^{D22}一节。由于 mobiLink 不会为现场总线区段上的设备供电,请确保您已连接到有源现场总线区段。



警告

当连接到 PC、智能手机或平板电脑时, mobiLink 会从现场总线区段吸收大约 10 mA 电流。确保现场总线电源能供应额外的电流。如果电源接近其极限容量, 则连接 mobiLink 可能会导致通信中断。

注意

如果要通过 FOUNDATION 现场总线或 PROFIBUS PA 访问现场设备,则需要获得单独的许可证。有关详细信息,请参阅 <u>FF 和 PA 的 mobiLink 许可</u>^{凸18}一章



建立现场总线连接

- 1. 如上所述,将 mobiLink 连接到现场总线环境。
- 2. 使用蓝牙或 USB 将 mobiLink 连接到 PC(或智能手机或平板电脑)。
- 3. 按住电源按钮约 2 秒钟以打开 mobiLink。
- 4. 在 PC(或智能手机或平板电脑)上启动您选择的应用程序。
- 5. 选择 mobiLink 作为现场总线接口。

注意



操作模式通过使用的应用程序选择(MOBILINKdtm 或 ComConf)。mobiLink 检查 接口上的电气情况是否与所选模式匹配。因此, 在启动应用程序之前, 必须将 mobiLink 连接到 HART 设备或现场总线区段。 6. 确认 FIELDBUS LED 指示现场总线模式。 LED 每 2 秒钟闪烁一次。

4.5.1 有关 PROFIBUS PA 的特殊注意事项

所有的 PROFIBUS PA 主站必须在每个 PA 区段中使用相同的总线参数。mobiLink 已与以下 PA 主站一起经过测试和批准:

- Softing 网关(pnGate PA/PB、mbGate PA)
- Siemens PA Link (IM-153)
- Pepperl + Fuchs SK3
- Pepperl + Fuchs Basic Segment Coupler

限制:

以下 PA 主站无法与 mobiLink通信:

Pepperl + Fuchs SK1 & SK2

有关如何设置总线参数的详细信息,请参阅相应的 MOBILINKdtm 用户指南

4.5.2 FF 和 PA 的 mobiLink 许可

要将 mobiLink 用于 FOUNDATION 现场总线和 PROFIBUS PA, 您需要激活相应的许可证。该许可 证是可选的, 不包括在标准交付清单中。

- 1. 打开先前下载的 mobiLink Manager 以读取主机 ID。
- 2. 选择 Licensing (许可证)选项卡。

C	Licensing	Firmware Update	Device Information	n About
	Port	Serial No	Host ID	
	₽ US	B 190700536	37375047-0B5E	35DDBF8-082D3630-6F7C113C Read Copy

- 3. 点击[Read](读取)以获取要授予许可证的 mobiLink。显示主机 ID。
- 4. 点击[Copy](复制)。
- 5. 转到 Softing Industrial 网站, 然后点击右上角的 ² 图标进行注册, 或选择 <u>My Softing</u> <u>Portal</u> 链接。注册并登录之后, 您将进入 My Softing 页面。
- 6. 点击 [Register License](注册许可证)。
- 7. 在许可证密钥输入字段中,输入您的许可证证书中所载的许可证密钥。 购买 FOUNDATION 现场总线或 PROFIBUS PA 许可证后,您将收到许可证证书。
- 8. 将第 4 步中复制的主机 ID 粘贴到 My Softing 页面的 Host ID(主机 ID)字段中。

Register License

Please enter your License Key and your Host ID. If you want to get notified in case of new releases, just check enable release info.

Register License		Cancel
Enable Release Info		
Host ID		
12345-ABCDE-67890-FGHI	J	
License Key		
Activate License:		

- 点击 [Register License](注册许可证)。
 生成许可证文件。
- 10. 点击 [Download] (下载), 将许可证文件保存到您的 PC。
- 11. 切换到 mobiLink Manager 应用程序。
- 12. 选择具有相应的主机 ID 的 mobiLink。
- 13. 点击图标 U便在 PC 上搜索许可证文件, 然后点击[Open] (打开)。

14. 点击 [Transfer License](传输许可证)。 进度条显示安装状态。 安装完成时将会通知您。

4.6 在爆炸性环境下使用 mobiLink

在爆炸性环境下, mobiLink 必须通过蓝牙连接到 PC、智能手机或平板电脑。在爆炸性环境之外,可以通过 USB 接口连接 mobiLink。

mobiLink 符合危险区域 Zone 1/Zone 2(Gas-Ex 类别 2G)的本安要求。它可以连接到位于 Zone 0/1/2 IIC 组位置的设备上的 HART 回路或现场总线区段。



警告

始终合上 USB 护盖, 以保护 USB 接口.



警告

只能使用认可的电池。有关详细信息,请参阅<u>技术数据^{D22}。</u>



注意

只要 mobiLink 被用于危险区域之外和本安参数范围内,则可以将本质安全电路连接到 现场总线和 HART 接口。有关详细信息,请参阅 <u>技术数据</u>^{凸22}一节。



警告

将 mobiLink 连接到非本安电路或在指定的电气参数范围之外操作产品,将使防爆认证 失效。在这种情况下, mobiLink 可能无法再用于本安电路,并且必须对用户进行相应的 清晰标记,以防止误用。

4.7 延长电池寿命

通过从现场总线吸收 18 mA 电流,而不是标准的 10 mA 电流,可以延长 mobiLink 电池的寿命。 只需按下蓝牙按钮至少 3 秒钟即可。低电量 LED 指示灯将闪烁 2 或 3 次,以提示现场总线的功耗 变化。激活此模式后,低电量 LED 指示灯将每 5 秒钟闪烁一次。



注意

请记住, 18 mA 的更大功耗可能会对与您的 mobiLink 连接的现场总线区段的性能产生不利影响。

延长电池寿命仅针对现场总线应用有效。由于没有从 HART 回路吸收电流, mobiLink 完全由电池 供电。

4.8 更新固件

要更新 mobiLink 固件, 您可以从三个不同的固件文件中进行选择, 每个文件都对应一种受支持的 协议:HART, FOUNDATION 现场总线和 PROFIBUS PA。

- 1. 从 mobiLink 产品页面 下载最新的固件版本到您的 PC。 每个受支持的协议都有自己的固件版本。因此, 您应选择三个文件(HART、FF、PA)之一或全 部下载。
- 2. 在 PC 上启动 mobiLink Manager。
- 3. 选择 Firmware Update(固件更新)选项卡。
- 选择一个 mobiLink 设备。
 窗口将显示您连接的所有设备。
- 5. 点击图标 🛄 以选择刚下载的固件文件。 固件的版本显示在固件标签字段中。

mobiLink Mana	ger						_ • ×
00	optii	mize!	ng		0 1 0 0 0 1 0 1 0	$ \begin{bmatrix} 0 & 1 \\ 0 & 1 \end{bmatrix} \begin{bmatrix} 0 & 1 \\ 0 & 1 \end{bmatrix} $	
Licensing Firm	nware Update	Device Information About					
Port	Serial No	Firmware Tags					
Ψ USB	190700536	Firmware tags not yet rea	ad from the mobiLink.				Read Copy
Firmware File: Firmware Tag:	C:\Users	vtm\Downloads\mobiLinkPA[biLink V1.00.0.1315 Aug 2 201	DownloadFW (1).bin				
Status:							
			Start Firmware Update	Abort Fi	mware Update		

 点击 [Start Firmware Update](开始固件更新)。
 右下角的进度条指示更新状态。更新完成后,您将看到状态消息 Firmware update succeeded (固件更新成功)。

5 安装 mobiLink

在使用 mobiLink 之前, 请安装 MOBILINKdtm(用于 FDT 框架应用程序)或通信配置工具 (ComConf).。要更新 mobiLink 固件和管理可选的许可证, 您还需要安装 mobiLink Manager。您可 以从 mobiLink 产品页面 找到所有供下载的软件应用程序。

有关在美国安装的指导,请参阅 ANSI/ISA-RP12.06.01,在危险(机密)位置安装本安系统。所有安装都必须遵守本用户指南中的说明。篡改和替换非工厂组件可能会对系统的安全使用产生不利影响。在美国的安装必须符合美国国家电气规范(ANSI/NFPA-70 (NEC®))的相关要求。在加拿大的安装必须符合《加拿大电气规范》第1部分 (CSA C22.1)和 CSA C22.2 No 213:2017(或UL121201:2017)第9.2.1节(与危险场所相关的标志)以及第18.2至18.5节的相关要求



注意

对于根据加拿大和美国法规进行的安装, 请参阅安全相关的 <u>FM 控制图</u>^{□24}(也可以从 <u>mobiLink 产品页面</u>上下载)。

- 1. 下载最新的 MOBILINKdtm 或通信配置工具软件.
- 2. 双击安装文件以开始安装.



注意

您将需要管理员访问权**限才能安装**该软件。如上所述启动安装程序,并使用 UAC 对话框中的访问数据授权安装。确保在 UAC 对话框中提到"Softing AG"是经过验 证的发布者。如果您以管理员身份登录,则只需确认您的选择。

- 3. 选择**安装**语言.
- 4. 按照安装向导的说明进行操作。



注意

如果在安装过程中发生错误,请联系Softing 技术支持部门。

5. 对 mobiLink Manager 重复下载和安装步骤。

6 技术数据

Fieldbus 接口(Foundation 现场总线/F	PROFIBUS-PA)
连接	极化 4 mm 香蕉型插孔(红色/黑色)
物理层	根据 IEC 61158-2, 1 型:31.25 Kbit/s, 电压模式
标 称 输入电流(现场总线)	10 mA(Ufieldbus > 9.0 V) 18 mA 以延长电池寿命 (Ufieldbus > 9.5 V)
现场总线终 端器	不包括 现场总线终 端器
用于非危险区域和非本安电路的输入电压	+9 +32 V
HART 接口	
连接	4 mm 香蕉型插孔(红色/黑色)
物理 层	HART FSK 型调制解调器
本安现场总线/ HART	
本安参数	根据 IBExU 18 ATEX 1001 或 IECEx IBE 18.0001 Li 低到可忽略不计, Ci 5nF EX ia IIC, Ui = 30V FISCO
绝缘	1500 VDC(USB 和现场总线之间) 1500 VDC(USB 和 HART 之间)
蓝牙	
蓝 牙射频模 块	Laird BT900
BT 模式	双模式 (Classic Bluetooth 和 Bluetooth Low Energy)
输出功率	+8 dBm(最大)
范围	14 m
USB	
速度	USB 2.0 全速
连 接器	USB Type C
电 气	非本安型 请勿在危险区域内使用 5 V, 100 mA Um = 253 V 对 ESD 敏感的端口
电池	
电 池种 类	碱性, IEC-LR6, 标准电压 1.5 伏 可用于危险区域。请使用指定的劲量E91 或金霸王 MN1500。 如使用其他类型或其他制造商电池会使认证无效

环 境条件	
IP 防护等级	IP54(带护 盖的 USB)
工作温度	-20 °C +50 °C
存储	请将电池存放在室温干燥的地方
跌落高度	1 m
认证,标志	
ATEX	IBExU 18 ATEX 1001 Ex ib [ia Ga] IIC T4 Gb Ex ib [ia Da] IIIC T100 °C Db
IECEx	IECEx IBE 18.0001 Ex ib [ia Ga] IIC T4 Gb Ex ib [ia Da] IIIC T100 °C Db
China Ex	2020xxxxxxxxxxx Ex ib [ia Ga] II C T4 Gb Ex ibD [iaD 20] 21 T100 °C

铭牌示例

mobiLink V1.15	Softing IA GmbH D-85540 Haar Richard-Reitzner-Allee	
FF Device ID: 1E6D114003_mobiLink_S IBEXU 18ATEX1001	N_202512376	Use of USB see manual
(a) II 2D Ex ib [ia Da] IIIC IECEX IBE18.0001 Ex ib [ia Ga] IIC T4 Gb Ex ib [ia Da] IIIC T100 °C	T100 °C Db FISCO -20°C R-R-sof S-20-A	Field Device C <t 50°c<br="" <="">F-mobiLink V*BO-****</t>

mobiLink	CMIIT ID:
DBA-XX-XXXXX	2020DJ10531
Ex ib [ia Ga] IIC T4 G	àb
Ex ibD [iaD 20] 21 T1	00°C
2020 XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	(
警告:	-20°C <t<sub>A< 50°C</t<sub>
请勿在危险场所使用	目USB 接口。
请勿在危险区域应打	丁开。
更换使用非建议电流	自爆炸的危险。
务必使用相同类型和	和容量的电池。
仅可使用手册中指定	定的电池,
劲量 E91 或金霸王!	MN1900 电池。
正确处理废旧电池。	
有关详细信息,请参	参见说明

6.1 控制图



7 符合性声明

本产品符合以下欧洲指令的规定。

- 2014/30/EU "EMC" EMC 2014/30/EU "电磁兼容性"指令可确保电气和电子设备不会产生 电磁干扰或不受电磁干扰的影响。
- 2014/34/EU "ATEX" ATEX 2014/34/EU Atmospheres Explosibles"指令适用于旨在用于潜在爆炸性环境的设备和防护系统。该指令定义了在产品投放欧盟市场之前必须应用的基本健康和安全要求以及合格评定程序。
- 2014/53/EU "RED" RED 2014/53/EU *无线电设备指令 / 通过设定安全和健康、电磁兼容性以及有效使用无线电频谱的基本要求,来确保无线电设备的单一市场。它适用于所有使用无线电频谱的产品。
- 2011/65/EU "RoHS" RoHS 2011/65/EU "有害物质限制"指令适用于可用于电气和电子设备 的某些有害物质的用途和用量,以防止这些物质进入生产流程,从而 使它们远离废物流。
- 2012/19/EU "WEEE" WEEE 2012/19/EU 电气和电子设备废弃物"指令与限制电气和电子设备中某些有害物质使用的指令(RoHS 指令)紧密相关。它确保为客户免费回收 WEEE。

EG-Konformitätserklärung EU Declaration of Conformity



Wir We

Softing Industrial Automation GmbH Richard-Reitzner-Allee 6 D-85540 Haar

erklären hiermit in alleiniger Verantwortung, dass das Produkt declare under our sole responsibility that the product

Modell / Typ Model / Type

mobiLink V1.00, mobiLink V1.01, mobiLink V1.10

mit den Anforderungen der folgenden Richtlinien übereinstimmt complies with the requirements of the following directives:

ATEX-Richtlinie 2014/34/EU ATEX directive 2014/34/EU EMV Richtlinie 2014/30/EU EMC directive 2014/30/EU RED-Richtlinie 2014/53/EU RoHS-Richtlinie 2011/65/EU ROHS directive 2011/165/EU

Angewandte harmonisierte Normen Applied harmonised standards:

> EN 55032:2015, Class B EN 61326-1:2013 EN 61000-6-2:2005/AC :2005 EN 60079-0:2018 EN 60079-11:2012 EN 300328 V2.1.1 EN 301489-1 V2.2.0 EN 301489-17 V3.2.0 EN 62311:2008 EN 62368-1:2014+AC:2015

29.05,19 Ort, Datum

Place, Datun

Template: V1.07

1 Geschäftsführer

Managing Director

Seite 1 von 1 Page 1 of 1 Version: 1.10

SUPPLIER'S DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name:Softing Inc.Address:7209 Chapman Highway
Knoxville, TN 37920
USAPhone/Fax No:+1.865.251-5252 / +1.865-579-4740Product Name:mobiLink

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications without the approval of manufacturer could void the user's authority to operate the equipment

Representative Person's Name

Dr. Wolfgang Trier, CEO

Jue 215, 2019 h

Date, Signature:

7.1 认证标志

mobiLink 是一种国际认证产品, 它符合以下认证标志所代表的必要标准和法规



CE 标志表示该产品符合欧盟健康、安全和环保要求, 并且已经取得了符合上述欧盟指令的证明, 可以向 Softing Industrial Automation GmbH 公司索取。



FCC

CE

FCC 标志(联邦通信委员会)用于美国射频设备的证明。它对有意和无意的电磁辐射 设置了限制,以保护电磁频谱。mobiLink 已通过测试,符合 FCC 规则第 15 部分中 关于 B 类数字设备的限制。



WEEE

WEEE 标志(气和电子设备废弃物)表示必须在使用寿命结束后,将产品及其电池与 普通废弃物分开处理。包装材料和磨损部件应按照国家法律和当地的废物处置法规 进行处理。



ATEX

ATEX/EX 标志 (Atmosphères Explosibles) 表示该产品已通过欧盟的最终用户测试和认证,并且符合 ATEX 2014/34/EU 指令的爆炸环境标准.



HART

HART 标志表示该产品在 4-20mA 回路上支持 HART 通信协议(Highway Addressable Remote Transducer)。



Fieldbus Foundation

Fieldbus Foundation 标志表示该产品支持主机设备的现场总线规范。



蓝牙

此标记表示该产品已通过蓝牙无线通信认证。.

7.2 蓝牙认证

使用蓝牙无线技术的设备必须具有由联邦通信委员会(FCC)分配的标识号,以授权在美国销售无线设备;以及由加拿大工业部(IC)分配的标识号,以授权在加拿大销售无线设备。

mobiLink 已在以下国家和地区通过了蓝牙无线通信认证:

- 欧盟
- 美国
- 加拿大
- 日本

7.2.1 在美国使用

mobiLink 包含具有 FCC ID 授权代码 SQGBT900 的发射器。 本设备符合 FCC 规则的第 15 部分。操作必须符合以下两个条件:

- 设备**不会造成有害干**扰。
- 设备**必须接受收到的任何干**扰,包括可能导致意外操作的干扰。

根据 FCC 规则第 15 部分, mobiLink 符合 B 类设备的限制。这些限制旨在为住宅设施中的有 害干扰提供合适的保护。本设备会产生、使用并辐射射频能量, 如果未按照说明进行安装和使 用, 可能会对无线电通信造成有害干扰。但是, 不能保证在特定设施中不会发生干扰。如果本 设备确实对无线电或电视接收造成有害干扰(可以通过打开和关闭设备来确定), 则我们建议 用户尝试通过以下一种或多种措施来消除干扰:

- 调整接收天线的方向或位置。
- 增加设备和接收器之间的距离。
- 将设备连**接到与接收器不同电路的插座上**。
- 向经销商或有经验的广播/电视技术人员寻求帮助。

7.2.2 在加拿大使用

mobiLink 包含具有 IC 标识 3147A-BT900 的发射器。

加拿大工业部(IC)警告声明:

本设备符合加拿大工业部免许可证 RSS 标准。操作必须符合以下两个条件:(1)本设备不会造成干扰,(2)本设备必须接受任何干扰,包括可能导致设备意外操作的干扰

IC 辐射暴露声明

该 EUT 符合 IC RSS-102 中针对一般人群/不受控制的暴露极限的 SAR 要求,并且已经根据 IEEE 1528 中指定的测量方法和程序进行了测试。

7.2.3 在日本使用

由 mobiLink 操作的蓝牙模块类型 BT900-SA 已获准在日本市场使用。该模块的证书编号为 142-150156/AA/00。

7.3 ATEX EC 证书

	The case have been been	An-Institut de	er TU Bergakademie F	reiberg		
[1] [2]	EU-TYPE	EXAMINATION O	CERTIFICATE - Tr	anslation	(Ex)	
	intended for us	se in potentially explosiv	BE-1148 ATEX1004	(014/34/E0		
[3]	EU-type exam	mation certificate number	BEXUISATEX1001	I Issue 1		
[4]	Produce	modicink				
[5]	Manufacturer:	Softing Industrial Auto	mation GmbH			
[6]	Address:	Richard-Reitzner-Allee 85540 Haar GERMANY	96			
[7]	This product a documents the	nd any acceptable varia	tion thereto is specified in	the schedule to this	certificate and the	
[8]	IBExU Institut of Directive 20 tifies that this p lating to the de given in Annex	für Sicherheitstechnik G 114/34/EU of the Europe product has been found asign and construction o k II to the Directive.	SmbH, notified body numb an Parliament and of the to comply with the essent of products intended for us	er 0637 in accorda Council, dated 26 F tial health and safe e in potentially expl	nce with Article 17 February 2014, cer- ty requirements re- osive atmospheres	
	The examination	on and test results are n	ecorded in the confidential	test report IB-19-3	-0055.	
[9]	Compliance w	ith the essential health a	and safety requirements ha	is been assured by	compliance with:	
	except in resp	ect of those requirement	ts listed at item [18] of the	schedule.		
[10]	If the sign *X* i ic conditions o	is placed after the certifi f use specified in the sci	cate number, it indicates the hedule to this certificate.	hat the product is su	ubject to the specif-	
[11]	This EU-type e uct. Further re uct. These are	examination certificate r quirements of the Direc not covered by this cert	elates only to the design a tive apply to the manufact tificate.	and construction of uring process and	the specified prod- supply of this prod-	
[12]	The marking o	f the product shall includ	de the following:			
		© ©	I 2G Ex ib [ia Ga] IIC I 2D Ex ib [ia Da] IIIC -20 °C ≤ T _{amb} ≤ +50 °C	T4 Gb T100 °C Db		
IBEx	U Institut für Sic	herheitstechnik GmbH	stielle Ero	Tel: + 49	(0) 37 31 / 38 05 0	
Fuch 0959	smühlenweg 7 9 Freiberg, GER	MANY	IBEXU	Fax: + 49 (0) 37 31 / 38 05 10	
By or	der		Sicherheits-	are not valid. C duplicated comp	entificates may only be pletely and unchanged.	
			GmbH	In case of disp	pute, the German text	
1.	Hense		Chp.Nr. CO	shall prevail.		
/. Dipl	Heuse Ing. [FH] Henke	11' (r	- Seal - notified body number 0637)	shall prevail.	eiberg, 2019-05-09	
/. Dipl	Hense Ing. [FH] Henke	ir (r	- Seal - setilied body number 0637)	shall prevail.	eiberg, 2019-05-09	
/. Dipl	Heule Ing. [FH] Henke	r (*	- S08I - sotified body number 0637)	shall prevail.	eiberg, 2019-05-09	
/. Dipl	Heuse Ing. [FH] Henke)r (r	- Soal - notified body number 0637)	shall prevail.	eiberg, 2019-05-09	
/. Dipl	Heuse Ing. [FH] Henke	or (r	- Soal - - Soal - notified body number 0637)	shas prevail. Fr	eiberg, 2019-05-09 Page 1/3 IBE-U18AEX1001 11	
DipL-	Hense Ing. [FH] Henke	or en	- Seal - otified body number 0637)	shas prevail. Fr	Page 1/3 BEXUIBATEX1001 1	
FB 106	Hende ing. [FH] Henke	or (r	- Soal - - Soal - cotified body number (0637)	shat preval.	eiberg, 2019-05-09 Page 1/3 IBESUTEATEX1001 1	
/. Dipl	Heuse Ing. [FH] Henke		- Sol - - Sol - cotfiel body number 0637)	shat prevail. Fr	eiberg, 2019-05-09 Page 1/3 IBESU18ATEX1001 1	
/. Dipl	Heuse Ing. [FH] Henke	IBExU Institut for An-Institut de	ur Sicherheitstect	shat prevail. Fr	eiberg, 2019-05-09 Page 1/3 BBEAUTBATEX1001 1	
FB100	Heuter ing. [FH] Henke 100 1 Drawings and The document	n IBExU Institut f An-Institut de Sare listed in the test re	ur Sicherheitstect	shat prevail. Fr nnik GmbH reiberg	eiberg, 2019-05-09 Page 1/3 IBESU18ATEX1001 1	
FB100 FB100 19] BExL	Ucuber Ing. [FH] Henke Ing. [F	IBEXU Institut fr An-Institut de Documents are listed in the test re herheltstechnik GmbH May	Ur Sicherheitstech r TU Bergakademie F port.	shat prevail. Fr	eiberg, 2019-05-09 Page 1/3 IBEAUTBATEX1001 1	
FB100 FB100 FB100 FB100 FB100	Drawings and Interview of the second	IBEXU Institut fr An-Institut de Documents are listed in the test re herheltstechnik GmbH MANY	Ur Sicherheitstech r TU Bergakademie F port.	shat prevail. Fr	eiberg, 2019-05-09 Page 1/3 IBEAUTBATEX1001 1	
FB108 FB108 FB108 BExL Subsc	Maule Ing. [FH] Henke Ing. [FH] Henke	IBEXU Institut fo An-Institut de Documents are listed in the test re herheitstechnik GmbH MANY	Ur Sicherheitstech r TU Bergakademie F port.	shat prevail. Fr	eiberg, 2019-05-09 Page 1/3 BBESU1BATEX1001 1	
FB108	Maule Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke der Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule Maule	r IIBExU Institut fi An-Institut de Documents are listed in the test re are listed in the test re herheitstechnik GmbH	Ur Sicherheitstech T U Bergakademie F port.	shat prevail. Fr	eiberg, 2019-05-09 Page 1/3 IBEAUTBATEX1001 1	
The second secon	Maule ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke The document The document The document The document of the docu	IBEXU Institut fr An-Institut de Documenta are listed in he test re herheitstechnik GmbH AMANY	Ur Sicherheitstech or TU Bergakademie F	nnik GmbH reiberg	elberg, 2019-05-09 Page 1/3 BBE-018ATEX1001 1	
FB 100 FB 100 (19] BEEXL (19] BEEXL (19] DipL-1	Maule Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke	IBEXU Institut fr An-Institut de Documents s are listed in the test re herheitstechnik GmbH MANY	ür Sicherheitsteck r TU Bergakademie F	shat prevail. Fr mik GmbH reiberg	elberg, 2019-05-09 Page 1/3 IBESUTISATECTION 1 alberg, 2019-05-09	
FB 108	Maule Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke	IBEXU Institut fr An-Institut de Documents e are listed in the test re herheitstechnik GmbH MANY	ür Sicherheitstecl	shat prevail. Fr mik GmbH reiberg	elberg, 2019-05-09 Page 1/3 IBESULISATEX1001 1	
TB 100 TB 100	Maule Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke	r IBExU Institut fr An-Institut de Documents e are listed in the test re herheitstechnik GmbH AAAAY	ür Sicherheitstech nr TU Bergakademie F	nnik GmbH reiberg	eiberg, 2019-05-09 Page 1/3 IBE-UTBATEX1001 1 siberg, 2019-05-00	
FB 108	Maule Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke Ing. [FH] Henke	r IBExU Institut fr An-Institut de Documents are listed into test re herheitstechnik GmbH AAAY	Ur Sicherheitstech or TU Bergakademie F port.	nnik GmbH reiberg	eiberg, 2019-05-09 Pege 1/3 IBE-UTBATEX1001 11	

Page 3/3 IBExU18ATEX1001 | 1

	MI-INSUL	at del tro belgenadonno troibelg
[13]		Schedule
[14]	Certificate I	umber IBExU18ATEX1001 Issue 1
15]	Description of product mobilink is a handheid battery Fieldbus devices or PROFIBI smartphones via USB or Bluetoo mobilink may be used in hazard ted to certified intrinsically safe fi According to FISCO, IEC 60079- The user has to make sure that tion.	powered interface providing access to HART devices. Foundation IS PA devices from personal computers, tablet computers or in connections. Joug areas to configure and manage field devices. It may be connec- tidous circuits during operation. It annex 0, it is a field device. the electrical parameters of the mobilink match the fieldbus installa-
	Safety relevant hint: USB must not be used inside has	ardous areas.
	Technical data	
	Ambient temperature:	-20 °C to +50 °C
	Ex-area:	1000 1, 41
	Dust-classification:	lic
	FISCO field device	
	Intrinsically safety ratings:	FISCO
		or Ende NO 11 - 2017 Linearlighte Oi FigE
		Exita IIC, UI = 30 V, LI negligible, CI 5 hr
	non intrinsic safe interface	USB 2.0
	Uram	5 V
	loom	100 mA
	Um	253 V
	Bluetooth:	
	RF power:	8 dbm / 7 mW
	Variations compared to issue 0 o	f this certificate:
	Variation 1	
	A dissipative foil is used thus the changed.	e device may be used in gas group IIC and the marking has been
	Variation 2	
	The device fulfils the requirement	ts of EN IEC 60079-0:2018.
[16]	Test report The test results are recorded in t The test documents are part of th	he confidential test report IB-19-3-0055 of 2019-05-08. te test report and they are listed there.
	Summary of the test results The device mentioned under [4 equipment of group II and catego	1 still complies with the requirements of explosion protection for Ex ry 2G or 2D in type of protection Intrinsic Safety 'I'.
[17]	Specific conditions of use None	
[18]	Essential health and safety red in addition to the essential healt item [9], the following are consis- test report: None	uirements and safety requirements (EHSRs) covered by the standards listed at lered relevant to this product, and conformity is demonstrated in the

FB106100 | 1

IECEx 证书 7.4

要获取 IECEx 合格证书的完整 PDF 文件, 请转到 mobiLink 产品页面的 <u>下载</u>, 或 <u>http://iecex.iec.ch</u>, 并在搜索窗口的名称字段中输入"Softing"。

IFC I	ECEX	IECEX Certificate
	Ти	of Conformity
	INTERNATIONAL ELEC IEC Certification Schu for rules and details of	CTROTECHNICAL COMMISSION eme for Explosive Atmospheres the IECEX Scheme Viet www.ieoes.com
Certificate No.:	IECEX IBE 18.0001	Issue No: 1 Certificate history:
Status:	Current	Issue No. 1 (2018-02-09) Issue No. 0 (2018-04-18) Proce 1 of 4
Date of Issue:	2019-05-09	Page I 01 4
oplicant:	Softing Industrial Automation GmbH Richard-Reitzner-Allee 6 85540 Haar Germany	
Equipment:	mobiLink	
Optional accessory:		
ype of Protection:	Intrinsic safety ""	
	Ex ib (ia Ga) IIC T4 Gb	
	Exite ha balline 1100 ie be	
Approved for issue of Certification Body:	in behalf of the IECEx	DiplIng. Alexander Henker
Position:		Head of Certification Body
Signature:		1 () () () () () () () () () (
for printed version)		1. Henler
Jate:		2019-05-09
. This certificate an . This certificate is r I. The Status and au	d schedule may only be reproduced in full. not transferable and remains the property of ithenticity of this certificate may be verified b	the issuing body, y visiting the Official IECEx Website.
Certificate issued by		
IBEXU	Institut für Sicherheitstechnik GmbH Certification Body	IBEXU
	Fuchsmühlenweg 7 09599 Freiberg	
	Germany	
IEC 7	ĒĊĒX	IECEx Certificate
	ECEX	IECEx Certificate of Conformity
	ECEX NO.	IECEx Certificate of Conformity
LEC, J	IECEX IBE 18.0001 2019:05:09	IECEx Certificate of Conformity Issue Not. 1 Page 3 of 4
EC. 0	ECEX IECEX IBE 18.001 2019-05-09	IECEx Certificate of Conformity New No. 1 Page 3 of 4 Stretch
Certificate No: Date of Issue: EQUIPMENT: Equipment and syste	ECEX IBE 18.001 Z019-05-09 mms coverent by this certificate are as follow	IECEx Certificate of Conformity Issue No: 1 Page 3 of 4 Schedule
Certificate No: Date of Issue: SCUIPMENT: Coupment and syste	ECEX ISE 18.001 2019-05-09 mms covered by this certificate are as follow	IECEx Certificate of Conformity Name No: 1 Page 3 of 4 Schedue
Certificate No: Jato of Issue: EQUIPMENT: EQUIPMENT: EQUIPMENT is a handbet works from percent	ECEX IBE 18.001 2019-05-09 ms covered by this certificate are as follows distatery-powered interface providing access distatery-powered interface providing access	IECEX Certificate of Conformity Mare No: 1 Page 3 of 4 Social standards MART devices, Foundation Flexibius devices or PRDFBUS PA es u USB or Distriction connections.
Certificate No: Date of Issue: SCUIPMENT: Quipment and syste bobLink may be used colds during operating	ECEX IBE 18.001 2019-05-09 and covered by tha certificate are as follow d battery-powered interface providing poses comparts. Iable comparison or simulphone of the interface providing powers of battery-powered interface providing powers to battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery battery batter	IECEX Certificate of Conformity New No 1 Page 3 of 4 Schedule In USB of Hadron Fieldburd devices or PROFIBUS PA we to USB of Hadron Fieldburd devices or PROFIBUS PA get laid devices. It may be connected to certified intersically and fieldburd
Control of Issue: Control of Issue: Could for the section of Issue: Could for the section of Issues: Could for the section of Issues: Cou	ECER (IEE 18.0001 2019-05-09 and control of the conflicate are as followed a battery-proving interface providing accel components. Ible completions or smallphore 1 b Integrations areas to configure and mana n.	IECEX Certificate of Conformity June No. 1 Page 3 of 4 Schedue In In Monte Soundation Flexibulis devices or PROFIBUS PA Inter Soundation Flexibulis devices or PROFIBUS PA Inter Soundation Flexibulis devices or PROFIBUS PA Inter Soundation Flexibulis devices or PROFIBUS PA
Control of the second s	IF A DATA OF A A	IECEX Certificate of Conformity Jack No: 1 Page 3 of 2 Schedul Meride Schedule Fundation Fieldback Schedule of PROFIBUS PA Schedule Schedule Fundation Fieldback Schedule of PROFIBUS PA (Schedule Schedule Fieldback Schedule of Schedule of PROFIBUS PA (Schedule Schedule Schedule of Schedule of Schedule Schedule Schedule of Schedule o
Currenticate No: Caretticate No: Caretticate No: Caretticate No: Component and syste Component and syste Component and syste Component and syste Component States Component Component Component Component States Component Component States Component Component States Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Component Comp	ECENT IN THE STATE	IECES Certificate of Conformity Jace No. 1 Jace No. 1 Asses Stade state NATT devices, Foundation Flektbus devices of PROFIBUS PA to NAUSS of Disaston connected to certified intrinsicity safe fieldbus state NATT devices, Foundation Flektbus devices of PROFIBUS PA to NAUSS of Disaston connected to certified intrinsicity safe fieldbus state NAUT devices, Foundation Flektbus devices of PROFIBUS PA to NAUSS of Disaston connected to certified intrinsicity safe fieldbus state NAUT devices, Foundation connected to certified intrinsicity safe fieldbus
Currificate No: Date of Issue: SQLIPMENT: Equipment and systs ability is a heardhell vices from particular builty is a heardhell vices from particular builty relevant him: Bit must not builty our series	ECCEVENT AND A CONTRACT AND A CONTRA	IECES Certificate of Conformity Jawe No. 1 Jage 3 of 1 James No. 1 Address No. 1 Standard at No. 1038 of Elucionis Fueldous devices of PROFIBUS PA to MART devices. Foundation Fueldous devices of PROFIBUS PA en un USB of Elucionis connected to confided intrivucady sade fieldstase at devices. It may be connected to confided intrivucady sade fieldstase at match the fieldstas installation.
Certificate Acc Certificate Acc Certificate Acc Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Courses Course	ECENTRAL AND A CONTRAL AND A C	IECEEX Certificate of Conformity Mare No. 1 Page 3 of 2 Packate ** **
Control of the second of the s	ECCF. ISE 18.001 2019-05-03 mit covered by this certificate are as followed battery-powered interface providing access compares. Ealide controllates or mainfigure data the interface providing a control or mainfigure and managements of the mobil of the interface access of the interface access of the interface of the interface access of the interface access of the interface of the interface access of the interface access of the interface of the interface access of the interface access of the interface of the interface access of the interface access of the interface access of the interface of the interface access of the interface acces	IECEEX Certificate of Conformity Base No: 1 Page 3 of 2 State International Conference of PROFIDUS PA State International Conference of PROFIDUS PA State State St
Control of the second of the s	ECCE: III E 16.001 2019-05-09 mm covered by this certificate are as follows to battery-powers interface providing access comparises. Iailite complete or simalifying a battery-powers interface providing access comparises. Tailite complete or simalifying to battery-powers interface providing access compares. Tailite complete or simalifying a battery compares or the mobility in the electrical parameters of the electrical parameters of the mobility in the electrical parameters of the mobility in the electrical parameters of the mobility in the electrical parameters of the electrical parameters of the mo	IECEX Certificate of Conformity Leve No 1 Page 3 of 4 Schoole No No No No No No No No No No No No No
Control of the second s	ECCE: UE 18.0001 2019-05-09 Imm covered by this certificate are as followed a battery-proving investigation of any displayed a battery-proving investigation of a battery displayed a battery-proving investigation of a battery-proving investigation of a battery- displayed a battery-proving investigation of a battery-proving investigation of a bat	IECEEX Certificate of Conformity use No. 1 Page 3 of 2 Standa T T The Mandeman Antipation Fundaus devices or PROFIBUS PA Standa The ULBS of Blackmonentions.
Carificate No: Carificate No: Cate of Issue: SCUIPMENT: Guipment and syste SCUIPMENT: Guipment and syste SCUIPMENT: Guipment and syste SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPMENT: SCUIPM	ECEN IDE 16.001 2019-05-09 Imm covered by this certificate are as follows a balance of the certificate are as	IECEX Certificate of Conformity June WR 1 Page 3 of 2 School was a set of the Second S
Control Contro	ECCE: UE 18.001 LIDECE: UE 18.001 Z01905-09 ans covered by this certificate are as follow to battery-powered interface providing pose comparts. Edited counters or the mobility of battery-powered interface providing access counter and the electrical parameters of the mobility in the electrical parameters of the electrical parameters of the mobility in the electrical parameters of the mobility in the electrical parameters of the mobility of the electrical parameters of the mobility in the electrical parameters of the electrical parameters of the mobility in the electrical parameters of the electrical parameters of the mobility in the electrical parameters of the electrical parameters of the mobility in the electrical parameters of th	IECEEX Certificate of Conformity Iere Re I Page 3 of 2 Standa Iere Voldes, Foundation Fleidburd devices or PROFIBUS PA US 0 Shall devices. It may be connected to certified intresically and fieldburs ret match the fieldburs installation.
Control Contro	ECCE: ILE 18.001 201905-09 mm covered by this certificate are as follow to asserve the second second second second a battery-powered interface providing scores computers. Iable completers or stim temport at battery-powered interface providing scores and second second second second second at the second second second second second second second second second second second second second second second	IECEEX Certificate of Conformity Iere No. 1 Page 3 of 2 Standar Iere Markets, Produktion Fieldburd devices or PROFIBUS PA US 10 Bio Elludor ormercions. Iere Indevices, Formation Fieldburd devices or PROFIBUS PA estandar
Control of the second s	ECE: KEE 18.001 2019-05-09 Imme converted by this confiltrate are all follower and converted by this confiltrate are valid by access converted by this confiltrate are valid by access and converted by the confiltrate are valid by access and the detectical parameters of the mobili inside hazardous areas.	IECEEX Contificate of Conformity use No. 1 ages of a standa as the standard of the standard of the standard of the standard of the standard devices. It may be connected to certified intrinsically safe fields that the fields us installation.
Certificate No: Certificate No: Data of Issue: Equipment and system decides and system de	ECEX IBE 18.001 2019-05-09 Imm covered by this certificate are as follows to attemption of the certificate are as follows to balance of the certificate are	IECEEX Certificate of Conformity use No. 1 2 base 3 2 base 3 3 3 4 4 4 4 base 4 5 5 4 5 5 6 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Certificate No: Date of Issue: Equipment and syste double from personal social results of the system oblicits from personal double from	ECCEVENT LECENSE 18.0001 2019-05-09 ENDER CONTREL OF THE SECOND d battery-powered interfaces providing access conversed by this certificate are as follows d battery-powered interfaces providing access d battery-powered interfaces providing access d battery-powered interfaces providing access d battery-powered interfaces providing access d battery-powered interfaces are as follows d battery-powered interfaces are as follows are as follows are as follows d battery-powered interfaces are as follows d bat	ILCURE CONTINUES
Cartificate No: Date of Issue: Date of Issue: Equipment and systs Equipment and systs addLink is a harnchet works from parceal dobLink my be user activities and ingenerations: BB must not be user and a systematic filter BB must not be user and the momentations in infinise case inter BB 2.0 mon 5 V mon	ECENTRAL ELECTRICATION CONTRAL	ILCURE CONTINUES
Control of the second of the s	ECCE-IUE 18.0001 Z019-05-09 ms covered by this certificate are at follow 2 battery-powered interface providing access computers. Edited counters or mit mitters d battery-powered interface providing access counters and access or configure and mana sources and access or configure and mana sources are accessed on the mobilities of the mobilities of the the dedictical parameters of the mobilities in mitter accessed on the mobilities of the mobilities of the dedictical parameters of the mobilities in mitter accessed on the mobilities of the mobilities in mitter accessed on the mobilities of the mobilities in the dedictical parameters of the mobilities of the dedictical parameters of the mobilities of the dedictical parameters of the mobilities in the dedictical parameters of the dedictical parameters of the mobilities in the dedictical parameters of the dedictical parameters of the dedictical parameters of the	IECEEX Certificate of Conformity Page 3 of 1 Standa To the USB of Haddware Pointation Problem devices or PROFIDUS PA and USB of Haddware Pointation Problem devices or PROFIDUS PA and the USB of Haddware Pointation Problem devices or PROFIDUS PA and the USB of Haddware Pointation Problem devices or PROFIDUS PA and the USB of Haddware Pointation Problem devices or PROFIDUS PA and the USB of Haddware Pointation Problem devices or PROFIDUS PA and the USB of Haddware Pointation Problem devices or PROFIDUS PA and the USB of Haddware Pointation Problem devices of PROFIDUS PA and the Problem devices of PROFIDUS PA and the Pointation Problem devices of PROFIDUS PA and the Problem devices of Profit Problem devices of PROFIDUS PA and the Pointation Problem devices of PROFIDUS PA and the Pointatio
Control Contro	ECCE: UE 18.001 2019-05-09 and covered by this certificate are as follows to aster-yourself infratos providing access computers. Islid completer or smallphotes of aster-yourself infratos providing access computers. Islid completer or smallphotes and access and access computers. Islid completer or smallphotes completers as a completer or smallphote is hazardous areas. com to to a -50 °C tacs: "" "" ""	IECEEX Certificate of Conformity Page 3 of 2 Standar In the Market Sector Package of PACPERUS PA In the Market Sector Package of Pac
Control of the second s	Incident hazardous areas.	ILCURE CONTINUES
Control of sources Control of sources Contro	ECEX IEE 18.001 2019-05-09 Imm covered by this certificate are as follower doubter-properties interface providing access compared. Tabled completences of the mobili is hardware areas to certificate are and them compared. Tabled completences of the mobili is hardware areas to certificate are and them compared. Tabled completences of the mobili inside hazardous areas. -20 °C to 1-90 °C tacs: 	IECEEX Certificate of Conformity use No. 1 are the MARINE Anotae Products of North US A anotae are the MARINE Anotae Products of North US A anotae are distant of Marine Anotae anotae of North US A anotae are distant of Marine Anotae anotae of North US A anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae anotae
Certificate No: Date of Issue: Equipment and syste exclusions: Equipment and syste exclusion and syste exclusion and syste exclusion and systems and systems and systems and systems and systems and systems and s	ECENTRAL SUBJECT SUBJE	ICCONTINUES IN THE STREAM STRE

	r II	CEX Certificate
		of Conformity
Certificate No:	IECEX IBE 18.0001	Issue No: 1
Date of Issue:	2019-05-09	Page 2 of 4
Manufacturer:	Softing Industrial Automation GmbH Richard-Reitzner-Alies 6 85540 Haar Germany	
Additional Manufacturing loca	ation(s):	
This certificate is issued as v IEC Standard list below and I found to comply with the IEC Rules, IECEx 02 and Operati	erification that a sample(s), representative of pr that the manufacturer's quality system, relating Ex Quality system requirements. This certificate onal Documents as amended.	oduction, was assessed and tested and found to comply with th to the Ex products covered by this certificate, was assessed an is granted subject to the conditions as set out in IECEx Scher
STANDARDS:		
The apparatus and any acce with the following standards:	ptable variations to it specified in the schedule of	of this certificate and the identified documents, was found to con
IEC 60079-0 : 2017	Explosive atmospheres - Part 0: Equipr	ent - General requirements
IEC 60079-11 : 2011 Edition:6.0	Explosive atmospheres - Part 11: Equip	ment protection by intrinsic safety ""
This Certificate does not in	dicate compliance with electrical safety and pe	formance requirements other than those expressly included in i
	Standards lister	l above.
TEST & ASSESSMENT REP	ORTS:	
A sample(s) of the equipment	t listed has successfully met the examination a	ad test requirements as recorded in
Test Reports		
DE/IBE/EXTR18.0002/00	DE/IBE/EXTR/16.0002/01	
Quality Assessment Report:		
DE/PTB/QAR11.0002/04		
DEIPTBK3AR11.0002/04		
DE/PTBK3AR11.0002/04		
DEIPTBIGAR11.0002/04		
DEPTBICAR11.0002/04		
DEPTB/CAR11.000204		
DEPTBIGAR11.000004		
DEPTEIGAR11.000004		
DEPTINGAR 11.000004		
DEPTBIGAR11.000004		
DEPTEIGAR11.000004		
		CEx Certificate
IEC IEC	×	CEx Certificate
	× IE	CEx Certificate
	K Inc.	CEx Certificate of Conformity
	ECEXIEE 18.001	CEx Certificate of Conformity
		CEx Certificate of Conformity

The device complies with the requirements of IEC 60079-0, Ed. 7 The foil on the front is dissipative, thus the device may be used in subdivision IIC.

	of Conformity
IECEx IBE 18.0001	Issue No: 1
2019-05-09	Page 3 of 4
Sche	edule
ems covered by this certificate are as follows:	
Id battery-powered interface providing access to HA Il computers, tablet computers or smartphones via U	ART devices, Foundation Fieldbus devices or PROFIBUS PA JSB or Bluetooth connections.
d in hazardous areas to configure and manage field on.	I devices. It may be connected to certified intrinsically safe fieldbus
IEC60079-11 annex G, it is a field device.	
re that the electrical parameters of the mobilink mate	ch the fieldbus installation.
d inside hazardous areas.	
-20 °C to +50 °C	
lace:	
ngs:	
i negligible , Ci 5 nF	
mW	
IONS OF USE: NO	

Softing Industrial Automation GmbH

Richard-Reitzner-Allee 6 85540 Haar / Germany https://industrial.softing.com + 49 89 45 656-340
 + 49 89 45 656-488
 info.idn@softing.com

